

PhotoPRINT: In the production of white color in Photoshop

1

Open Photoshop, Use the selection tool, or choose a tool to create the white area needs to be done.





8

Create a Spot Channel









Saved to TIFF

format

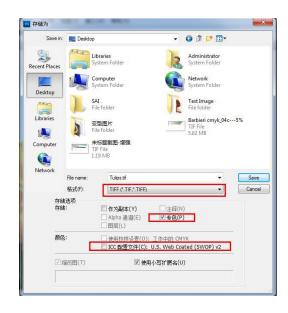

Setting the spot color name, display the name of the color and density

F 选项	
- 图像压缩	- T
◎ 无(N)	
LZW(L)	I
© ZIP(Z)	
O JPEG(J)	
品质(Q): 最大值 ▼	
小文件 大文件	
- 像素顺序	
◎ 隔行 (RGBRGB)(V)	
◎ 毎通道 (RRGGBB)(H)	
- 字节顺序	
IBM PC(I)	
Macintosh(M)	
□存储图像金字塔(S)	
□存储透明度(T)	
- 图层压缩	
◎ RLE (存储较快,文件较大)	
◎ ZIP(存储较慢,文件较小)	

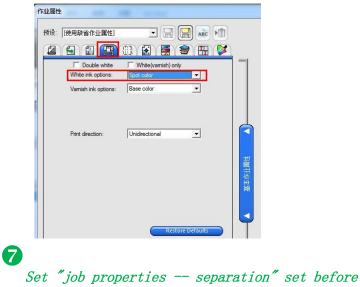

make the white channel print is white.

Note: double click the white channel can pop-up Settings dialog.

Note: 1, the save options: click the spot color color: ICC profile is not embedded. 2, TIFF options: use LZW compression, the compression is lossless compression. Other Settings with the default Settings.

6

Add white channel TIFF to PhotoPRINT

Note: PhotoPRINT must add TIFF spot channel optional password, opened the optional so the software can identify the TIFF color channel.

```
6
Set "job properties - printer options" option is
set to white ink color
```